


CAP H,I

NOTE: Illustrated for View H, unless otherwise indicated.

ALL VIEWS



Interfacing

Trim 1/2" (13mm) from lower edge and 1/8" (3mm) from remaining seam allowances of Front, Side and Back INTERFACING sections. Fuse to wrong side of each matching FABRIC section, following manufacturer's instructions.

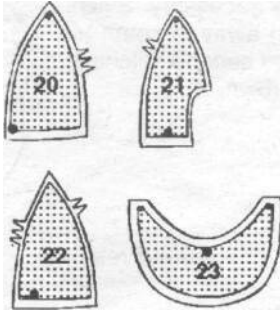


Crown and Visor


For crown, pin one FRONT 20 and BACK 21 section to each SIDE 22 section, matching symbols, as shown. Stitch in 1/4" (6mm) seams, ending at small •, as shown.

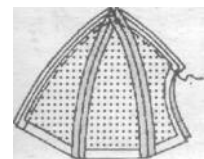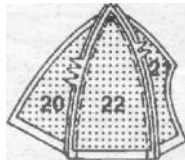


Pin crown sections together, matching symbols. Stitch in a 1/4" (6mm) seam.

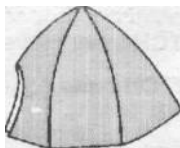

Turn. Press.

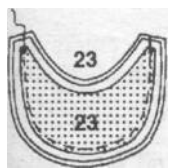


Stitch VISOR 23 sections together, leaving inner curved edge open, as shown. Trim.

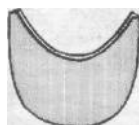

Turn. Press.




Using pattern tissue VISOR 24 as a guide, cut two sections from a 10" x 14" (25.5cm x 35.5cm) buckram remnant.

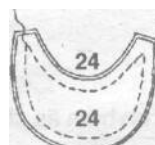


Stitch VISOR 24 sections together at outer edges in a 3/4" (20mm) seam.


Trim 1/2" (13mm) from outer edges.

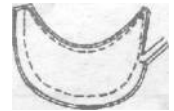

Insert visor 24 into visor 23. Baste raw edges together. STAYSTITCH, as shown.

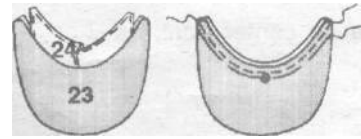


Pin visor to crown, matching symbols and clipping visor where necessary; baste.

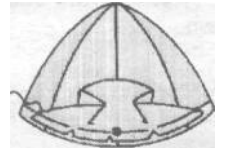


Back Opening

To prevent back opening edge from stretching, stitch along 3/8" (10mm) seam-line.

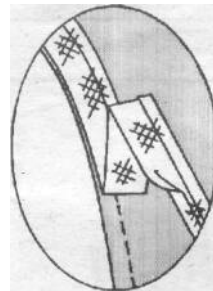

Open out one folded edge of bias tape; press out crease and preshape tape to match curve of opening by pressing lightly.

Pin bias tape to opening, having raw edges even. Stitch in a 3/8" (10mm) seam. Trim seam allowance to a scant 1/4" (6mm). Clip seam allowance if necessary.

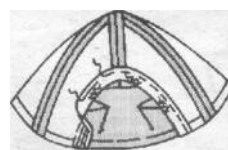

Turn Bias tape to inside along seam. Press. Baste in place. Stitch close to basted edge.

VIEW I

Flaps

For each flap, stitch one FLAP 25 section and one flap LINING section together at outer curved edges, leaving upper edge open.



Turn. Press. Baste raw edges together.



TOPSTITCH along outer curved edges.

With right sides together, pin flap to lower edge of crown, matching symbols. Baste.



NOTE: Flaps will not be shown in following illustrations unless otherwise indicated.

ALL VIEWS


Finishing

Pin grosgrain ribbon to lower edge of crown, placing straight edge slightly over 5/8"(15mm) seamline and turning in 1/4"(6mm) on each end at back opening edges, as shown.


Stitch ribbon in place along seamline. Trim seam allowance, being careful not to cut ribbon.




On outside, stitch along previous stitching to secure elastic and casing.

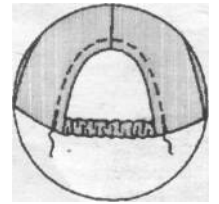

View H: **TOPSTITCH** ribbon in place along lower edge of crown between back stitching, as shown.

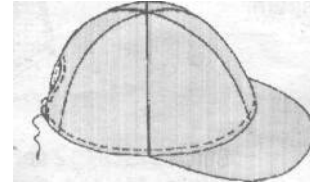


View I: Turn flaps to inside along seam; press. **TOPSTITCH** ribbon and flaps in place along lower edge of crown between back topstitching, as shown.

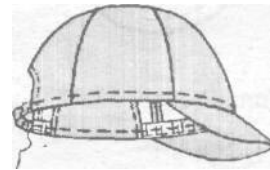


OPTIONAL: Cover button following manufacturer's instructions.


Turn ribbon to inside along seam; press.

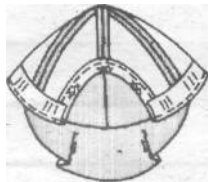

Sew button to top of cap at small •.

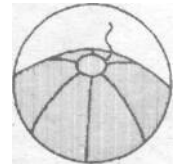

Stitch long edges of CASING 26 together in a 1/4"(6mm) seam.

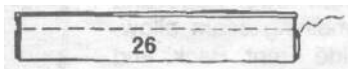

Turn. Press.



Cut a piece of elastic 3 1/2"(9cm) long.

Insert elastic into casing, having edges even; baste ends securely.



Lap ends of casing over bias tape, having edges even, as shown. Using safety pins, pin ends securely. Try on and adjust to fit, if necessary. Turn ribbon down and baste ends of casing securely in place, through all thicknesses.

